

STOPS - CLAM SHELL




WP853	WM845	WP855	WM846	WP856	WM848	WP858	WP830	WP831
3/8 x 2-1/4	7/16 x 1-5/8	3/8 x 1-5/8	7/16 x 1-3/8	3/8 x 1-3/8	7/16 x 1-1/8	3/8 x 1-1/8 #00771	3/8 x 7/8	3/8 x 3/4

STOPS - COLONIAL



G8090	WM935	E8090	WM936	D8090	WM938	C8090	B8090	A8090
3/8 x 2-1/4	7/16 x 1-5/8	3/8 x 1-5/8 #00777	7/16 x 1-3/8	3/8 x 1-3/8 #00776	7/16 x 1-1/8	3/8 x 1-1/8 #00775	3/8 x 7/8 #00774	3/8 x 3/4 #00773

STOPS - EXTERIOR

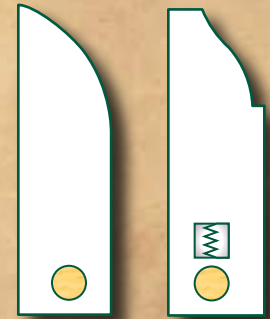


WP845	WP925
1/2 x 1-5/8	1/2 x 1-5/8

STOP - GARAGE DOOR




LWM903 9/16 x 2-1/4 #00778

BULLNOSE

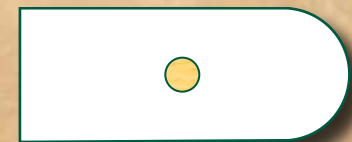


8144 11/16 x 1-3/4

STOPS - SANITARY

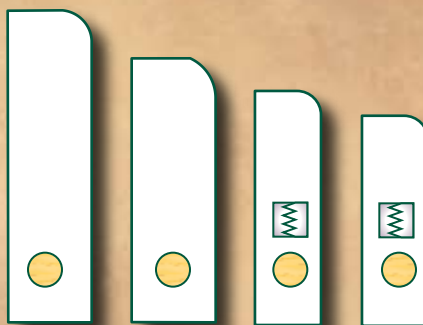

WM875	WM876	WM887	WM888
7/16 x 1-5/8	7/16 x 1-3/8	3/8 x 1-1/4	3/8 x 1-1/8 #10061 (7')

STOPS - BULLNOSE

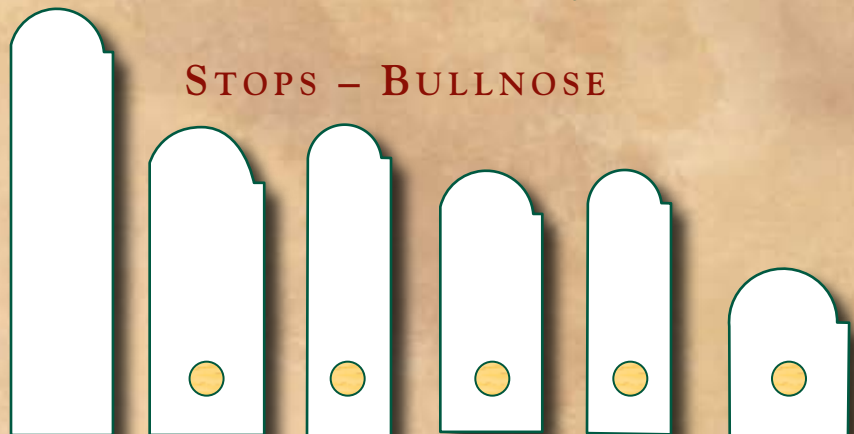

8121	B8121	D8121	A8121	C8121	L953
9/16 x 2 1/4	5/8 x 1-5/8	7/16 x 1-5/8 #20938	5/8 x 1-3/8	7/16 x 1-3/8	5/8 x 7/8 Sash Bead