


## SHOE - BASE

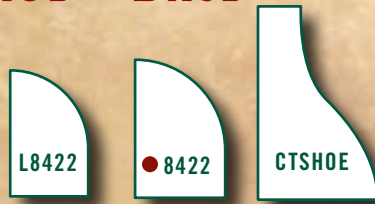

7/16 x 11/16    1/2 x 3/4    5/8 x 1

● ○ ◻ ◻

#21452-PFJ  
#00760-Pine  
#10229-Oak  
#28318-Flex (12 ft.)

CT Oak Shoe

## FLOOR MOULDINGS



7/16 x 11/16    1/2 x 3/4    5/8 x 3/4

● ○ ◻

#00740-Pine

## GLASS BEADS



3/8 x 1/2    7/16 x 3/4    3/8 x 7/8

● ○ ●

Bullnose  
#28695

## SHOE - MOULDING



● Colonial Shoe Moulding  
1/2 x 1  
#28810

## SKEW BACKS (CHAMFERS)



3/4 x 3/4    1 x 1

● ○

## PARTING STRIP



● 8432  
1/2 x 3/4  
#00752

○

## LATTICES

- L8279    1/4 x 3/4
- ● 8279    1/4 x 7/8  
#00747
- ● 8280    1/4 x 1-1/8  
#00748
- ● 8281    1/4 x 1-3/8  
#00749
- ● 8282    1/4 x 1-5/8  
#00750
- WM265    1/4 x 1-3/4
- F8282    1/4 x 2 Full
- G8282    1/4 x 2-1/4
- ● L8282    1/4 x 2-5/8  
#00751
- L265    1/4 x 3-1/2
- ● LWM264    1/4 x 5-1/4  
#11494

## SCREEN MOULDING



● WP140  
1/4 x 5/8  
#00758

○

## SHELF EDGE, SANITARY



● 8610  
1/4 x 3/4  
#12230

○

## SHELF EDGE, BEADED



● 8611  
1/4 x 3/4  
#00759

○

## ROPE MOULDING



POPLAR

OAK    1/2  
1/2    3/4  
3/4    1

